

## Technical Tip

Doc Number: FT-8002

Date: 12/09/11

### FT-DAS PROGRAMMING

1. Turn the ignition to the “on” position.
2. Hold buttons 1 and 2 (Lock and Unlock) together for 2.5 seconds. You will get two parking light flashes.
3. To set the Warn Away Zone 1, tap button 1 (Lock). After you get one parking light flash, tap the vehicle. You will get siren chirps 1-most sensitive through 10-least sensitive. This sets the impact sensitivity of Warn Away Zone1. Setting Zone 1 will automatically set Zone 2. If you would like to manually set Zone 2 proceed: To set the Instant Trigger Zone 2, tap button 2(Unlock). After you get two parking light flashes. Tap the vehicle. You will get siren chirps 1-most sensitive through 10-least sensitive. This sets the impact sensitivity of Instant Trigger Zone 2.
4. You will get two parking light flashes after the zones are set. You are ready to test your FT-DAS.

Dip Switch Settings:

Switch 1:	ON – 3 Degree Tilt	Switch 2:	ON – 4 Inch Movement
	OFF – 1.5 Degree Tilt		OFF – 3 Inch Movement